



HP Stream 11-d020nr Lower Case Replacement

Replace the lower case of the HP Stream 11-d020nr.

Written By: Ian Somerville



INTRODUCTION


Use this guide to remove the lower case of the HP Stream 11-d020nr. This should take you about 5-10 minutes. Use caution when taking the cover off of the laptop. The process requires a significant amount of force, and it can be easy to damage the internal components.



TOOLS:

- [Metal Spudger Set](#) (1)
 - [Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Lower Case

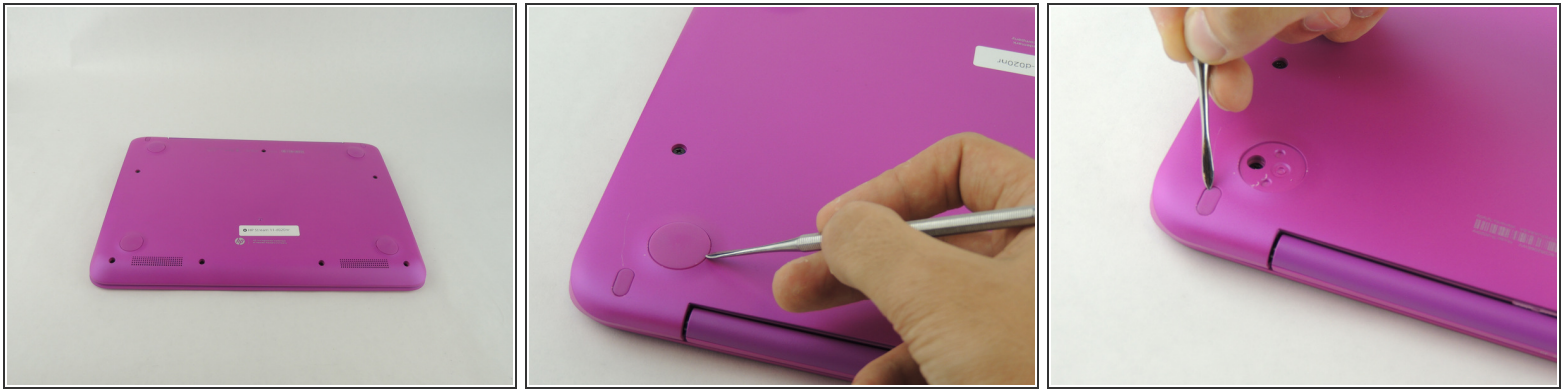

i Before disassembly, unplug and power off the Stream 11.

- Turn the laptop over to access the lower case.
- Using a metal spudger, remove the two small elliptical screw covers and the two large circular screw covers closest to the screen.

Step 2



- Remove the eleven 5.6 mm Phillips #00 screws.

Step 3



- Turn the computer upright and lift the screen.
- Carefully use the metal spudger to pry the plastic keyboard cover from the base.
 - ⚠ When using the metal spudger, be careful not to press into the components underneath the keyboard cover. If possible, use a standard spudger or plastic opening tool to remove the keyboard cover.
- Work the spudger around the cover to release the clips attaching the cover to the base.
- ⓘ Be patient when removing the cover, as there are many clips and it may take some time.

Step 4



- Using tweezers, unplug the cable connecting the ClickPad to the base.
- Remove the plastic keyboard cover.

⚠ The cover is attached to the ClickPad by a cable. Be careful not to lift the cover too far so you do not damage this cable.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-25 10:03:54 AM.